


**SWAN & DOVE ADJUSTABLE AIR MATTRESSES**  
**ASSEMBLY INSTRUCTIONS**  
**NO TOOLS REQUIRED**

1. Read instructions completely.

2. Remove all parts from the boxes.

You may assemble your entire system before placing it on your foundation or platform.

3. Unfold the cover, quilted side up and unzip to remove the top of the cover. Place the mattress with the inflator attached to it in the cover. Center air mattress auto-inflator facing out toward the inside of the cover side at the foot end.

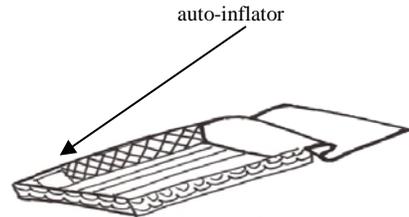

3. AIR HYBRID WITH DUAL AIR CHAMBERS:



Unfold the cover, quilted side up and unzip it.

Place the two air mattresses with an inflator attached to each one in the cover. Center the 2 mattresses side by side in the cover. The inflators should be facing out toward the inside of the cover side at the foot end.

4. Run the 2 cords on the inflator from the pump out the hole in the cover on the bottom at the head end.

5. Inflate the air mattress until soft, using the auto-inflator control.

6. Taking the two short foam rails, place them inside the cover, between the air mattress and the side of the cover, at the head and foot.

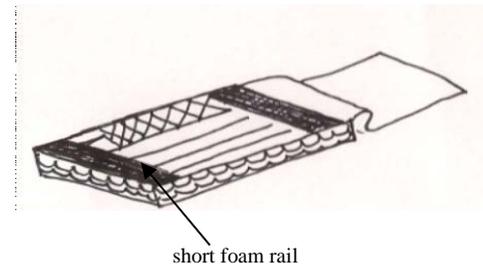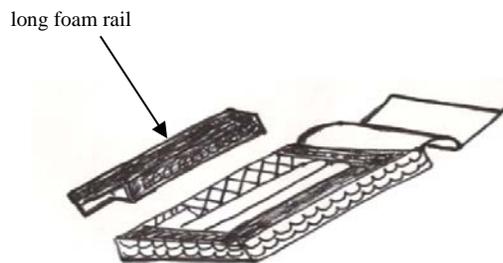

7. Now take the two long foam rails and place them in the cover between the head and foot rails. The side rail is cut out to accommodate the inflator which fits into this cut out.

8. Zip the cover closed. Use "Firm" setting on the inflator to fully inflate the air chamber (s). If necessary, partially unzip the cover and reposition the perimeter rails so that they stand straight and the lower outside edges align with the lower tape edges of cover. Close the cover and place the mattress on its support base, platform or foundation.

9. Lie on the mattress in your normal sleeping position. Place the control at a point convenient to reach on your side of the bed extending 1" to 5" out from a point between the mattress & foundation. Grasp the conveniently placed control and adjust in the desired direction until your personal comfort level is reached aa(approximately 2-5 seconds) Enjoy!

**INFLATOR UNIT OPERATION: Household use only. CAUTION: To reduce risk of electrical shock use indoors only.**

1. Plug inflator into 120V outlet.
2. Press switch on hand control module to "Soft" to release air from mattress.
3. Press switch on hand control module to "Firm" to add air to mattress.

Inflator unit and air chamber may be separated for servicing by extending the chamber's fill valve and loosening the connecting clamp.